

## Simplified RING alarm instructions



### To DISARM the system

**Enter your PIN into the keypad and press Disarmed button [4]**

### To ARM the system

**Shut all doors** (Important as all sensors must be CLEAR before arming. Fault lamp 3 indicates)

**Enter PIN into keypad and press AWAY button [5]** (60sec exit delay starts)

### Guide to Security Modes

**Disarmed 4:** no sensors will be monitored and no notifications or video will be sent to the monitoring station, the system will still be powered on and functioning.

**Home Mode 6:** only the Main Door sensor will be monitored. This can be used if you are in the range with the main door shut and want to be warned when someone opens the main door by the alarm going into entry delay mode.

**Away Mode 5:** Alarm is ARMED, all sensors will be monitored and a 30sec video will be taken when the Main Door is opened and the 30sec Entry Delay will start.

**PANIC alarm:** Press the  8 and  7 at the same time. It will trigger the alarm to call for help.

Use  8 key to cancel an entry or triggering Panic Alarm